


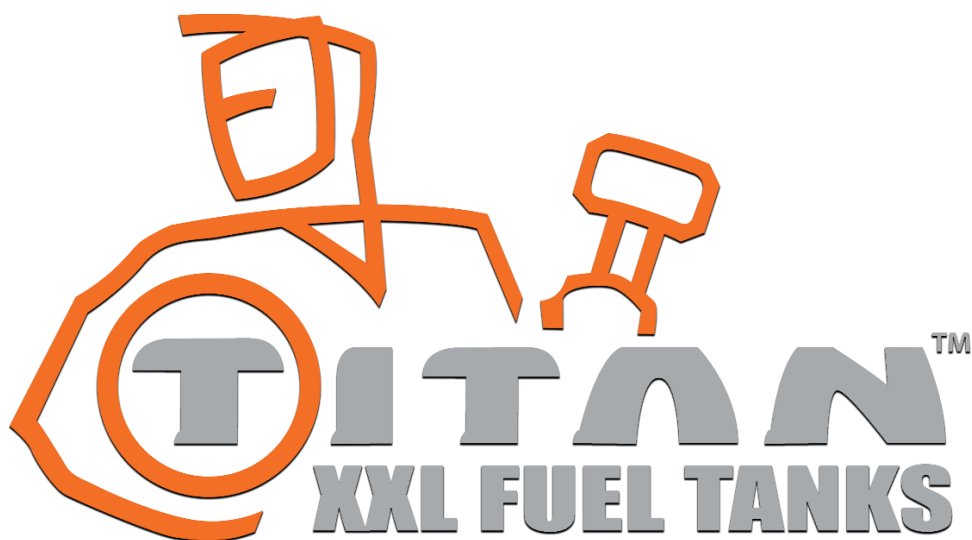

INSTALLATION INSTRUCTIONS FOR SUPER CAB LONG BED 7020217

Important Notice: This tank was NOT designed to be used with this truck configuration. Any attempt to install this tank in a Super Cab Long Bed truck is undertaken at the risk of the customer and installer.

Please read these instructions carefully and completely before starting the installation.

The super cab long bed truck has the same stock tank as the crew cab short bed tank. For this reason, these trucks very similar in setup. The main difference is that the cross member for the front support is in a different location. For most of this installation, follow the standard installation instructions for the 7020217 included below.

- | Step | Description |
|------|---|
| 1 | Before Step 24/Fig. 14 in the standard 7020217 instructions, the front support area must be modified. The cross member for the front support is too far forward for this tank and doesn't work as intended for our regular front support. |
| 2 | Remove the plastic clip holding the fuel lines from the frame. Remove the back half of the clip (including the Christmas tree fasteners) and the bottom line position. Trim the back of the remaining portion so that it's mostly smooth. |




Before



After

- 3 Take the upper bracket of the front support and cut it on the red lines in the picture below. Remove the extra piece (marked X) between the two cuts. Install the larger piece (A) to the cross member as per Fig. 14 in the typical instructions.

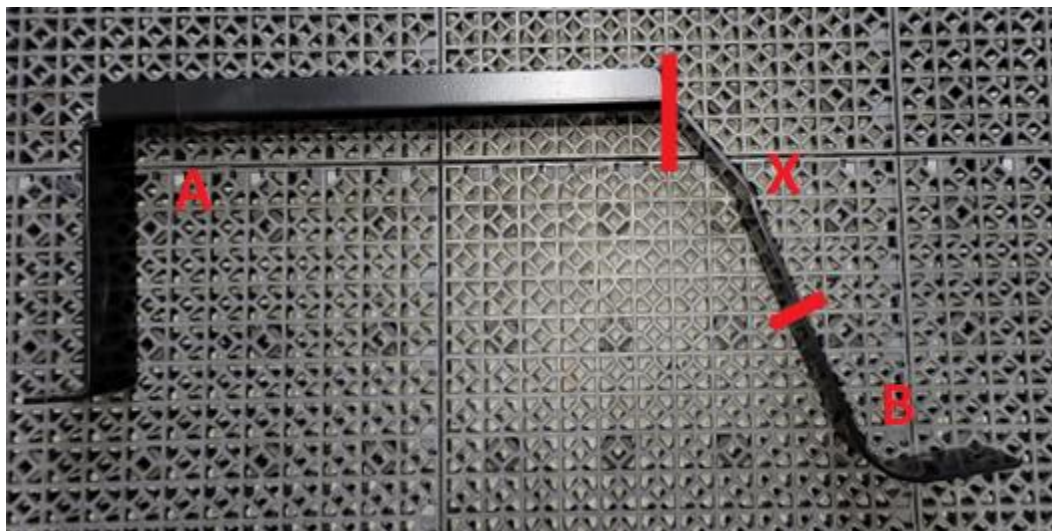

- 4 Take the smaller piece of the upper bracket (B) and bend it to a 90 deg angle. Place the larger end of piece B flush against the frame so that the foot of this section extends out under the frame rail. There should be roughly 3/4" of space between the bottom of the frame and the foot of the bracket. (See installed picture below for reference.)
- 5 Because this upper bracket was originally one piece, position piece B so that it's in line with piece A. Mark the position of this short section on the frame.
- 6 Before you mount this short section of bracket, place the flanged front support bolt through the hole. It will be difficult to get in place after this bracket is mounted.
- 7 Mount this short section using your preferred method.
 - a. We chose to mount it using the two holes the fuel line clip was mounted in. We installed (2) 1/4"-20 plusnuts in the frame and drilled holes in piece B.
 - b. It would also be possible to weld this bracket into place.


IMPORTANT NOTICE: All of our straps are galvanized. If you weld this bracket to the frame, make sure to take proper precautions to not breathe toxic fumes.



- 8 This cross member has an angled gusset that mounts the cross member to the frame. The tank has a notch in the original location to account for this gusset, but that notch doesn't extend to the new location. For that reason, the gusset will need to be notched to allow the tank to sit properly up against the cross member.
- 9 The fuel lines are made of rigid nylon. They can handle some heat, but too much will damage your fuel lines. We wrapped aluminum foil around the fuel lines to prevent them from being hit with sparks during the trimming process.
- 10 Use a cutting wheel to notch this gusset. As this gusset is at an angle and surrounded by easily damaged fuel lines, makes sure to exercise EXTREME caution and control to prevent damaging your vehicle. We left roughly 3/8" of the top section of the gusset to continue to add some support to the frame. We cut three quarters of the way across the gusset starting from the right edge. The bottom edge of the cutout was roughly halfway up the gusset.



- 11 After this notch is cut, deburr the rough edges. Paint any edge that got cut (include pieces A and B of the upper bracket) with black spray paint to inhibit corrosion. We also chose to slice open a short section of hose and wrap it around the trimmed hole to protect the tank from any rough edges.
- 12 The bottom strap of the front support has a flange that is supposed to extend up into a pocket on the bottom of the tank. This flange may need to be angled, unbent, or completely removed depending on the final location of piece B. If this flange is trimmed off, paint the edge with black spray paint.

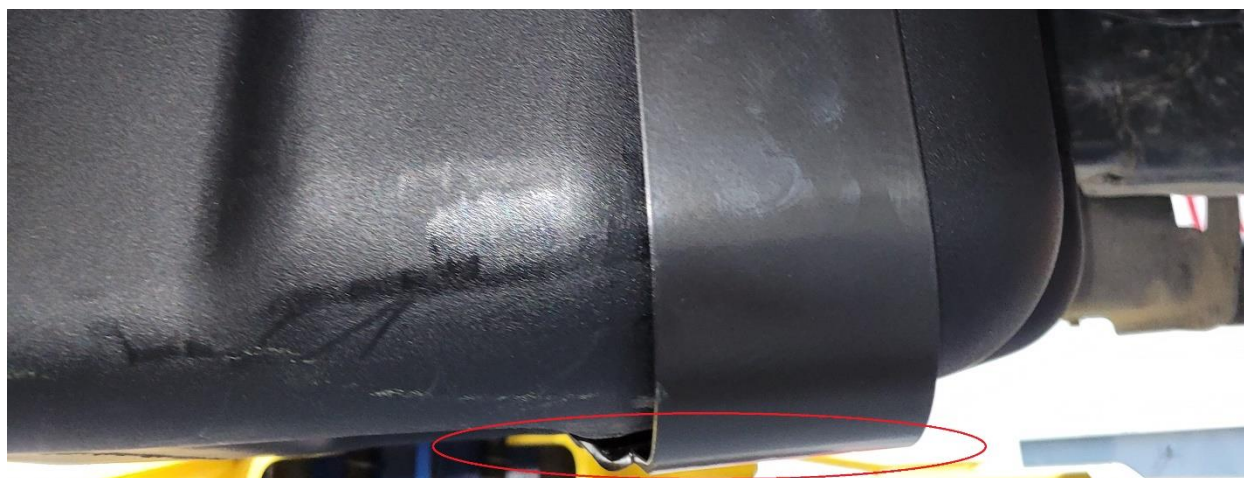

- 13 Finish mounting the tank per the typical instructions. When mounting the front support, attach the outboard bolt before the bolt next to the driveshaft.

- 14 If you have some slack between the bottom of the front support and the tank, you can shim it into place with rubber sheet.



- 15 Before taking the truck off the lift, check the gap between the tank and the driveshaft. We recommend achieving 2" of clearance between the tank and the driveshaft.

Important: Please read these instructions carefully and completely *before* starting the installation.

TITAN Fuel Tanks™

INSTALLATION INSTRUCTIONS



Extended Capacity Replacement Tank for FORD, Super Duty Diesel Pickup Trucks

7020217 For **2017+** FORD truck models F250 & F350: Crew Cab, Short Bed (6 1/2 ft.)

No drilling or cutting is required for this installation.

Required Tools:

- 1 ea. Ratcheting socket driver
- 2 ea. 10 mm, 13 mm sockets
- 1 ea. 12 inch long socket driver extension
- 2 ea. 8 mm, 15 mm end wrenches
- 1 ea. Small flat blade screw driver
- 1 ea. Large flat blade screwdriver

Recommended Optional Tools:

- 1 ea. Hydraulic transmission jack
- 1 ea. Impact wrench
- 1 ea. Vehicle Lift
- 1 ea. TITAN Fuel Caddy™ to transfer fuel.

- 1 ea. T-27 Torx bit
- 1 ea. Rubber Mallet
- 1 ea. Hook Pick

Generation 6



Tank Body Identification:

Note: The tank body has the above identification on its bottom. Please check to be sure the tank is properly identified as the one to fit your vehicle.

7020217 PARTS LIST

2017+ Ford Crew Cab Short Bed Titan Fuel Tank - 7020217			
Item	Description	TITAN Part Number	Quantity
1	2017 Ford CCSB Tank Body	02 0000 0193	1

2	O-Ring	02 0000 0197	1
3	Rollover Valve	99 0186 0000	2
4	1/2 NPT X 3/4" Hose Barb Adapter	99 0000 0625	1
5	Water Separator Mount	02 0000 0195	1
6	1/4"-20 X 3/4" Hex Drive Flat Head Screw, 18-8 SS	02 0000 0198	4
7	Mid Strap	02 0142 0000	1
8	2017 CCSB Ford Front Support Coated	02 0000 0433	1
9	3/8"-16 Serrated Flange Locknut, Grd 5, Zinc-plated steel	02 0000 0200	4
10	3/8" Oversized Flat Washer, 1.5" OD, Zinc-plated Steel	02 0000 0588	4
11	3/8-16 x 3" bolts, grade 8	02 0000 0432	2
12	3/8"-16 Flange Cap Screw, 1" Length, Grade 8, Black Phosphate Finish	99 0000 0450	2

IMPORTANT NOTICE: Before installation, be sure to thoroughly inspect inside of the tank for ANY foreign debris!

NOTE: Take a moment and write the new TITAN™ Tank serial number in the back of this instruction booklet now. The serial number is found on the bottom of tank.

NOTE: The original equipment tank's rear strap will be reused on the new TITAN Tank.

I. Remove Original Equipment Tank

Step	Description
1	Using best, safe practices, place the vehicle on a hoist that leaves the entire underside of the frame unobstructed.
2	Drain all the fuel from the original equipment (OEM) tank using a TITAN Fuel Caddy™, or a pump, or siphon.

- 3 Support the OEM tank.
- 4 Using a hook pick, loosen and remove the rubber seal that fits around the fuel fill spout and DEF fill tube (See Fig. 1).

<u>Step</u>	<u>Description</u>
5	Remove the bolts fastening the fuel fill spout (See Fig. 2).
6	Pull the fill spout assembly back toward the vehicle's frame and turn it so you have access to the hose clamps (See Fig. 3).
7	Disconnect the fill hose and vent line from the vehicle's fill spout.
8	There is a water separator attached to the front of the tank. It will have to be disconnected from fuel and electrical: First, disconnect the electrical connection on the bottom of the separator (See Fig. 4) by depressing the clip on the plug and remove.
9	Next, disconnect the fuel line at the top of the separator (See Fig. 5) by squeezing the two legs of the tab together and then pushing the entire tab towards the rear of the vehicle. Note: This coupling operates differently from all others involved in the install.
10	Disconnect the fuel line coupler located on the frame in front of the water separator (See Fig. 6). See also Fig. 7, "Method for Disconnecting Fuel Line Couplings".
11	Loosen and remove OEM tank straps by undoing the bolts on straps at inboard and outboard of the tank and lower tank a few inches. Hold the factory "J-nuts" with an end wrench to prevent them from breaking. Retain the rear strap as it will be reused with the new TITAN tank.
12	Disconnect fuel gauge electrical connection from sending unit on top of the tank.
13	Remove the OEM tank from the vehicle.



(Fig. 1) Loosen and remove rubber seal.



(Fig. 2) Remove the bolts holding the fill spout.



(Fig. 3) Move fill spout assembly toward vehicle frame to gain access to the hose clamps.



(Fig. 4) Disconnect electrical connection on the bottom of the water separator.




(Fig. 5) Fuel line connector at top of the separator.



(Fig. 6) Fuel line coupler located on the frame in front of the separator.

ator.

the water separator.

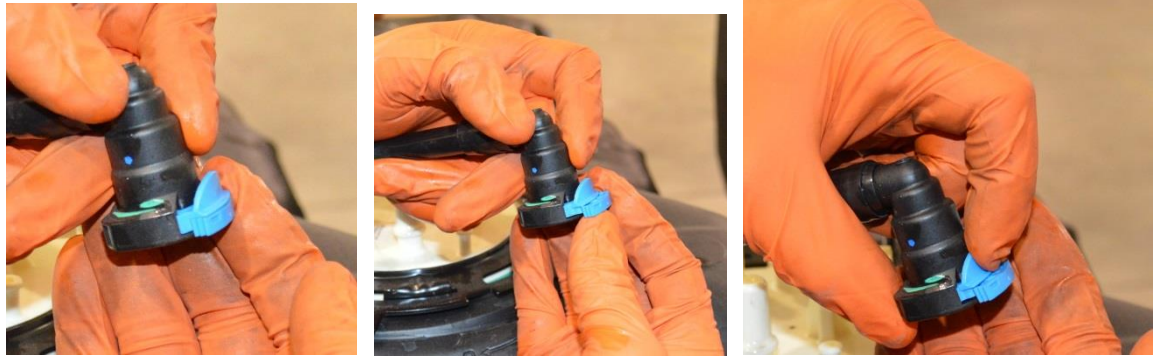

(Fig. 7): **Method for Disconnecting Fuel Line Couplings:** The majority of the couplings involved in this installation are of the quick connect type shown in left photo above. To disconnect, a) Slide the tab that has teeth on its edge outwards as shown in the center photo. b) Next, press the rounded button, as shown in the right photo, and pull the coupling apart. The coupling shown in Fig. 5 functions differently, see Step no. 9 for it.

II. Prepare Vehicle and Replacement Tank

Step	Description
14	Remove the guard located on the top of the OEM hold-down ring.
15	Disconnect all of the fuel lines from the sending unit.
16	On the front of the OEM fuel tank, use a T-27 Torx bit and driver to loosen and remove the screw, located on the bottom of the water separator, which holds it to the mounting bracket. With the screw removed, using a rubber mallet, carefully tap the water separator up and out of its mounting bracket on the tank (See Fig. 8). <u>Be very careful not to strike any of the fittings</u> on the bottom of the water separator.
17	Loosen the OEM hold-down ring on the sending unit by turning it counter-

- clockwise (See Fig. 9). Remove the sending unit from the OEM tank.
- 18 The new TITAN tank comes with an O-ring to seal for the sending unit. Make sure the new O-ring gasket is placed into the gland (groove) at the sending unit opening.
 - 19 Place the sending unit into the TITAN tank (See Fig.10). Be sure to turn the sending unit so that the tab lines up with the "tab location" marks on the tank (See Fig. 11).
 - 20 Place the hold down ring from the OEM tank onto the sending unit and tighten it clockwise as far as it will go (See Fig 12). Be sure the studs that hold the OEM guard are lined up in the same position as they were on the OEM tank.
 - 21 Move the fill hose and vent hose from the OEM tank to the new tank, install and tighten securely.
 - 22 Install the water separator on the TITAN tank by sliding it into the mounting bracket and tightening down the hold-down screw on the bottom.
 - 23 Install the fuel lines on the sending unit and water separator as they were on the OEM tank. Install the guard on the top of the hold-down ring being careful not to over-tighten the studs. The tank should appear as in Fig. 13.
 - 24 The Front Support Assembly is included as a kit with the tank. Assemble and install it on the vehicle's cross member as shown in Fig.14 leaving the bottom bracket off for now. Be sure all of the nuts holding the support to the vehicle's cross member are tightened to 15 lb.-ft. of torque.



(Fig. 8) Using a rubber mallet, carefully tap the water separator up and out of its mounting bracket on the OEM tank.



(Fig. 9) Loosen hold-down ring by turning it counter-clockwise as shown.



(Fig. 10) Place sending unit into the TITAN tank.




(Fig. 11) Line the tab on the sending unit up with the "tab location" mark on the TITAN tank.



(Fig. 12) Reuse the OEM hold-down ring to mount the sending unit in the TITAN tank. Tighten by turning it clockwise as far as it will go.



(Fig. 13) TITAN 7020217 tank shown with sending unit, water separator, fuel lines, sending unit guard, and fill and vent hoses installed; ready for installation into the vehicle.

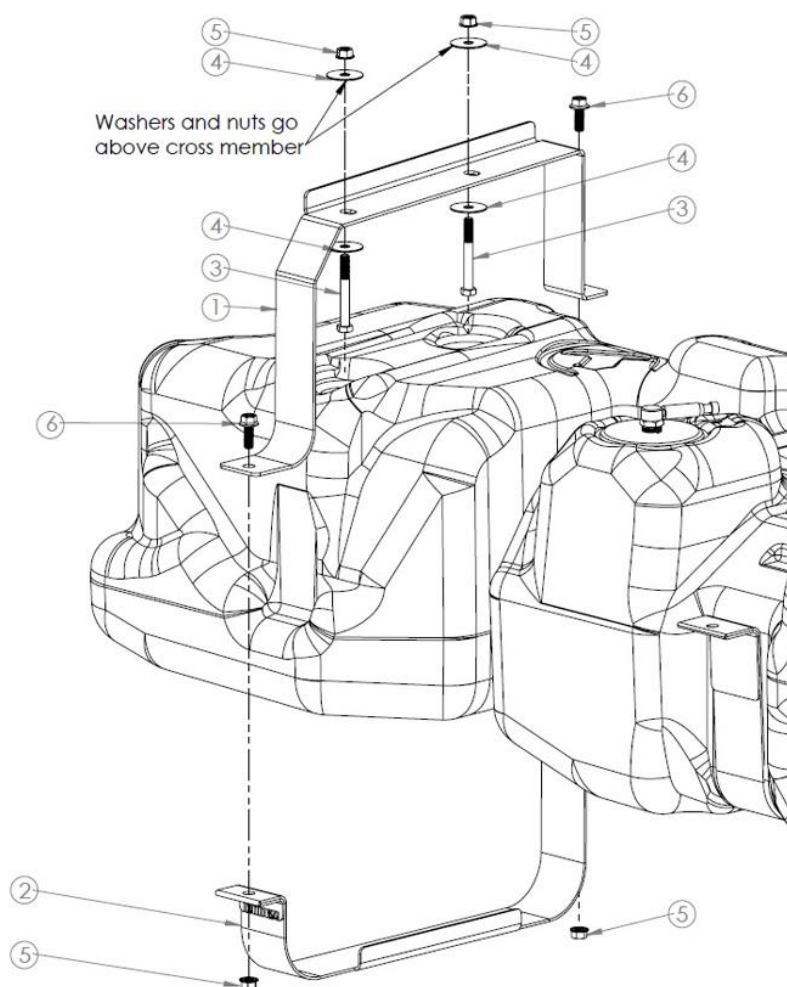

ID	Description	Part Number	Qty.
1,2	Front Support	02 0000 0433	1
3	3/8"-16 x 3" Hex Head HSS Screw, Grade 8	02 0000 0432	2
4	3/8" Oversized Flat Washer, 1.5" OD, Zinc Plated	99 0000 0588	4
5	3/8-16 Serrated Flange Locknut, Grade 5 Zinc Plated	02 0000 0200	4
6	3/8"-16 x 1" Flanged Cap Screw, Grade 8, Black Phosphorus Coating	99 0000 0450	2

(Fig. 14) Exploded view of the Front Support Assembly. Tighten all nuts to 15 lb.-ft.

III. Install Replacement Tank in Vehicle

Step	Description
25	Support the TITAN tank and lift it nearly into place leaving enough space to be able to reach up and plug the fuel gauge electrical connection onto the sending unit.
26	After plugging in the electrical connection on the sending unit, lift the tank all the way into place. Reuse the rear strap from the OEM tank as the rear strap on the TITAN tank. A new strap is included with the TITAN tank for the other strap position. Install both straps finger tight.
27	Install the bottom front support bracket with provided bolts and locknuts as seen in Fig.14 diagram.
28	Now tighten the two straps to the vehicle manufacturer's specifications.
29	Reconnect the electrical connection on the bottom of the water separator.
30	Reconnect the fuel line connections on top of the water separator and on the frame.
31	Reconnect the fill hose and vent line to the vehicle's fill spout.
32	Move the fuel fill spout back into place and replace and tighten the bolts holding it.
33	Replace the rubber seal that fits around the fuel fill spout and DEF fill tube.
34	Make sure ALL mounting hardware, clamps, bolts, etc. are properly installed and TIGHT. Double check it.
35	IMPORTANT! Lower vehicle, <u>fill tank to the first nozzle "click-off" with diesel fuel and check for leaks.</u>

Go to TITAN's website to view video installation instructions and tips.

* All capacities are approximate

Be sure to return the completed warranty registration for your new Titan fuel tank; or you can register on-line at www.titanfueltanks.com


You will find your tank's serial number located on the bottom of the tank.

Write your tank's Serial Number here: _____

A tank must be registered within sixty (60) days of receipt for the warranty to be valid.

Warranty is void if product is improperly installed.

For questions or customer service call **(800) 728-4982**

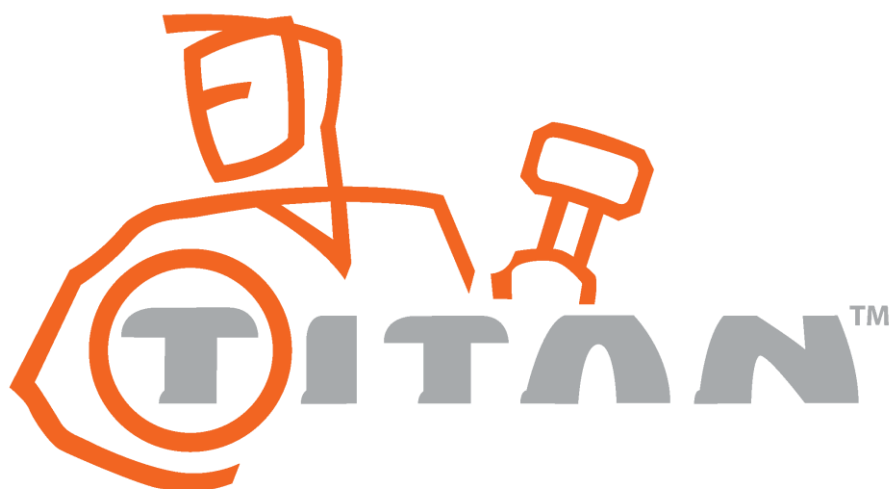

TITAN Fuel Tanks

P.O. Box 2225

Idaho Falls, ID 83403 USA

Telephone (208) 522-1325, FAX (208) 529-2162

www.titanfueltanks.com

TITAN Fuel Tanks are PROUDLY MADE IN THE USA

Revised 12.3.25 ©2025 Supertanks, LLC. All rights reserved.